

RESTRICTED
FOR OFFICIAL USE ONLY

AN 08-40RC65-2

HANDBOOK OF OPERATING INSTRUCTIONS

FOR

TARGET CONTROL TRANSMITTING EQUIPMENTS

RC-65 and RC-65-Z

NOTICE: This document contains information affecting the national defense of the United States within the meaning of the Espionage Act, 50 U.S.C., 31 and 32, as amended. Its transmission or the revelation of its contents in any manner to any unauthorized person is prohibited by law. (AR 380-5) (ARTS 75½ & 76, U. S. N. REGS-1920).

The information contained in restricted documents and the essential characteristics of restricted material will not be communicated to the public or to the press, but may be given to any person known to be in the service of the United States and to persons of undoubted loyalty and discretion who are cooperating in Government work.

NOTICE: For Official Use Only—Not to be communicated to anyone outside His Majesty's Service.

Not to be published. The information given in this document is not to be communicated, either directly or indirectly, to the press or to any person not holding an official position in His Majesty's Service.

Approved 24 MARCH 1944

RESTRICTED
AN 08-40RC65-2

Published under joint authority of the United States War and
Navy Departments and the Air Council of the United Kingdom.

SECURITY NOTICE

FOR U. S. PERSONNEL: This document contains information affecting the national defense of the United States within the meaning of the Espionage Act, 50 U. S. C., 31 and 32, as amended. Its transmission or the revelation of its contents in any manner to an unauthorized person is prohibited by law. (AR-380-5) (ARTS 75½ & 76, U. S. N. REGS—1920.)

The information contained in restricted documents and the essential characteristics of restricted materiel will not be communicated to the public or to the press, but may be given to

any person known to be in the service of the United States and to persons of undoubted loyalty and discretion who are cooperating in Government work.

FOR BRITISH PERSONNEL: For Official Use Only—Not to be communicated to anyone outside His Majesty's Service. Not to be published. The information given in this document is not to be communicated, either directly or indirectly, to the press or to any person not holding an official position in His Majesty's Service.

LIST OF REVISED PAGES ISSUED

NOTE: A heavy black vertical line, to the left of the text on revised pages, indicates the extent of the revision. This line is omitted where more than 50 percent of the page is revised.

This issue contains no revisions.

ADDITIONAL COPIES OF THIS PUBLICATION MAY BE OBTAINED AS FOLLOWS:

AAF ACTIVITIES.—Submit requisitions to the Commanding General, Fairfield Air Service Command, Patterson Field, Fairfield, Ohio, Attention: Publications Distribution Branch, in accordance with AAF Regulation No. 5-9. Also, for details of Technical Order distribution, see T. O. No. 00-25-3.

NAVY ACTIVITIES.—Submit requests to the Chief, Bureau of Aeronautics, Navy Department, Washington, D. C.

BRITISH ACTIVITIES.—Submit requirements on Form 294A, in duplicate, to the Air Publications and Forms Store, New College, Leadhall Lane, Harrogate, Yorkshire, England.

TABLE OF CONTENTS

<i>Section</i>	<i>Page</i>	<i>Section</i>	<i>Page</i>
Destruction of Abandoned Materiel in the Combat Zone	iii	<i>d.</i> Control Box BC-756.....	3
Unsatisfactory Report	iii	<i>e.</i> Antenna AN-117-A	3
Special Notice	1	<i>f.</i> Radio Modulator and Transmitter BC-925	3
I. GENERAL DESCRIPTION	1	<i>g.</i> Cord Connections	3
1. General	1	<i>h.</i> 12- or 24-Volt Operation.....	3
2. Principal Components	1	2. Adjustment	3
<i>a.</i> Equipment Supplied	1	<i>a.</i> Procedure	3
<i>b.</i> Equipment Required but Not Supplied	2	<i>b.</i> Low Temperature Adjustments.....	6
3. Power Requirements	2	III. OPERATION	6
II. INSTALLATION AND ADJUSTMENT..	3	1. Operation Procedure	6
1. Installation of Target Control Transmitting Equipment RC-65.....	3	<i>a.</i> Carrier Continuous	6
<i>a.</i> Mountings FT-442-A and FT-462-A..	3	<i>b.</i> Controlled Carrier	6
<i>b.</i> Dynamotor Unit PE-180.....	3	2. Functions of Switches on Control Box BC-756	6
<i>c.</i> Radio Control Box BC-494.....	3	IV. EMERGENCY OPERATION AND REPAIR	8
		1. Emergency Operation	8



LIST OF ILLUSTRATIONS

<i>Figure</i>	<i>Page</i>	<i>Figure</i>	<i>Page</i>
1. Complete Target Control Transmitting Equipment RC-65	iv	4. Radio Control Box BC-494, Mounting Dimensions	4
2. Radio Modulator and Transmitter BC-925, Mounting Dimensions	4	5. Control Box BC-756, Mounting Dimensions....	4
3. Dynamotor Unit PE-180 with Mounting FT-443-A, Mounting Dimensions.....	4	6. Antenna AN-117-A, Mounting Instructions....	5
		7. Target Control Transmitting Equipment RC-65, Cording Diagram	7

SAFETY NOTICE

This equipment employs high voltages which are dangerous and may be fatal if contacted by operating personnel. Extreme caution should be exercised when working with the equipment.

Destruction of Abandoned Materiel in the Combat Zone

In case it should become necessary to prevent the capture of this equipment and when ordered to do so, DESTROY IT SO THAT NO PART OF IT CAN BE SALVAGED, RECOGNIZED, OR USED BY THE ENEMY. BURN ALL PAPERS AND BOOKS.

Means:-

1. Explosives, when provided.
2. Hammers, axes, sledges, machetes, or whatever heavy object is readily available.
3. Burning by means of incendiaries such as gasoline, oil, paper, or wood.
4. Grenades and shots from available arms.
5. Burying all debris or disposing of it in streams or other bodies of water, where possible and when time permits.

Procedure:-

1. Obliterate all identifying marks. Destroy nameplates and circuit labels.
2. Demolish all panels, castings, switch- and instrument-boards.
3. Destroy all controls, switches, relays, connections, and meters.
4. Rip out all wiring and cut interconnections of electrical equipment. Smash gas, oil, and water-cooling systems in gas-engine generators, etc.
5. Smash every electrical or mechanical part, whether rotating, moving, or fixed.
6. Break up all operating instruments such as keys, phones, microphones, etc.
7. Destroy all classes of carrying cases, straps, containers, etc.
8. Bury or scatter all debris.

DESTROY EVERYTHING!



Unsatisfactory Report

For U. S. Army Air Force Personnel:-

In the event of malfunctioning, unsatisfactory design, or unsatisfactory installation of any of the component units of this equipment, or if the material contained in this book is considered inadequate or erroneous, an Unsatisfactory Report, AAF Form No. 54, or a report in similar form, shall be submitted in accordance with the provisions of Army Air Force Regulation No. 15-54, listing:

1. Station and organization.
2. Nameplate data (type number or complete nomenclature if nameplate is not attached to the equipment.
3. Date and nature of failure.
4. Airplane model and serial number.
5. Remedy used or proposed to prevent recurrence.
6. Handbook errors or inadequacies, if applicable.

For U. S. Navy Personnel:-

Report of failure of any part of this equipment during its guaranteed life shall be made on N. Aer. 4112, "Report of Unsatisfactory or Defective Material," or a report in similar form, and forwarded in accordance with the latest instructions of the Bureau of Aeronautics. In addition to other distribution required, one copy shall be furnished to the inspector of Naval Materiel (location to be specified) and the Bureau of Ships. Such reports of failure shall include:

1. Reporting activity.
2. Nameplate data.
3. Date placed in service.
4. Part which failed.
5. Nature and cause of failure.
6. Replacement needed (yes—no).
7. Remedy used or proposed to prevent recurrence.

For British Personnel:-

Form 1022 procedure shall be used when reporting failure of radio equipment.

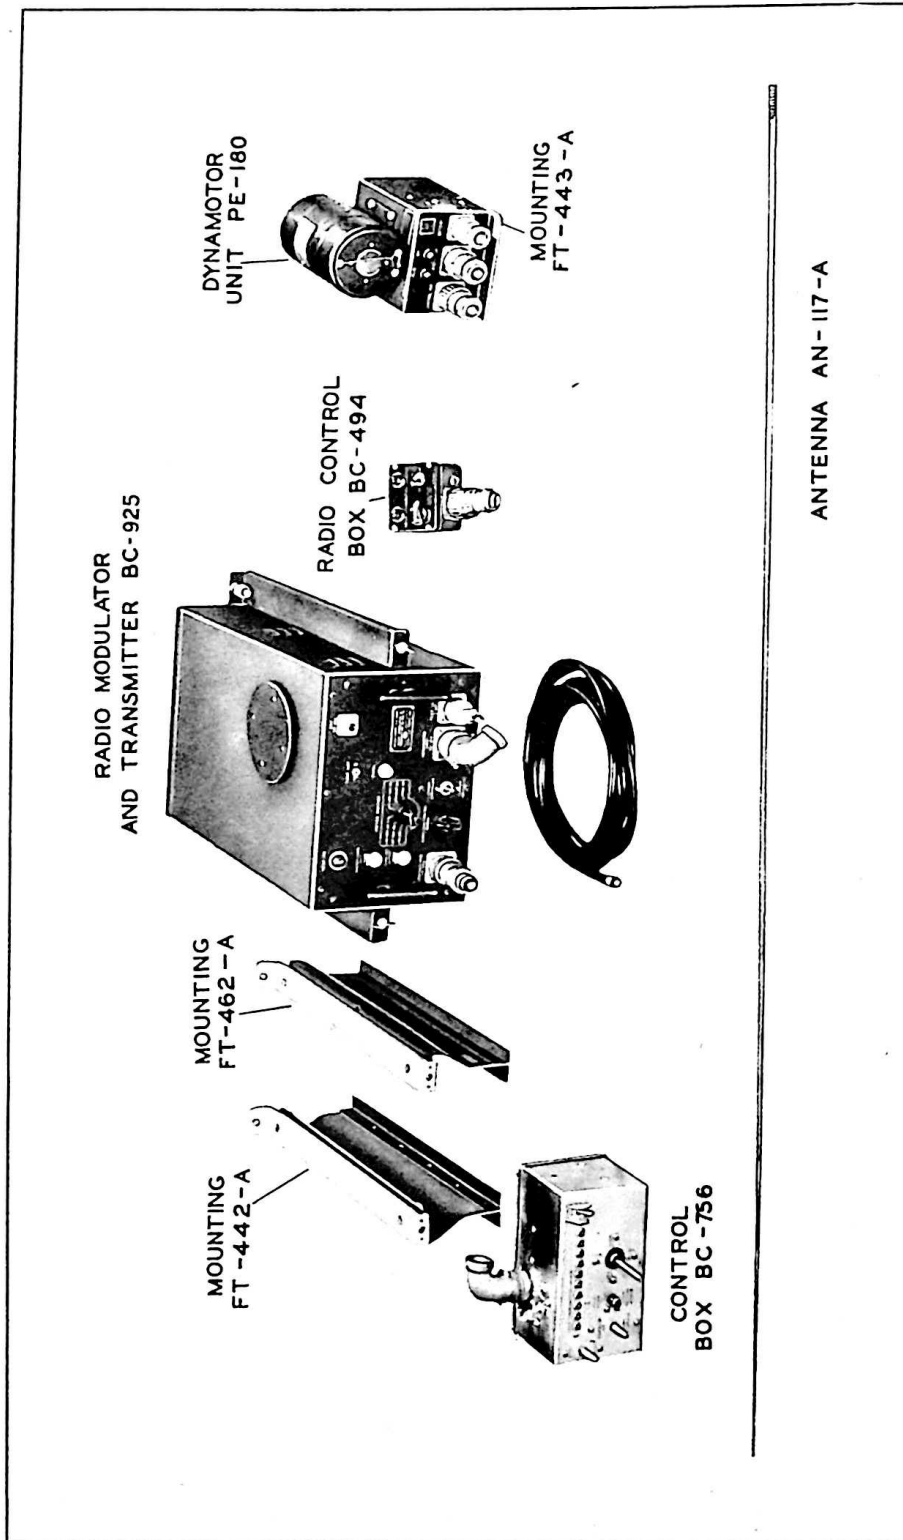


Figure 1—Complete Target Control Transmitting Equipment RC-65

SPECIAL NOTICE

Since Target Control Transmitting Equipments RC-65 and RC-65-Z are basically the same (except for a 28-volt system for the former and a 14-volt system for the latter), this book has been prepared to apply to both equipments. Components are identical except for the following, which are not interchangeable:

**TARGET CONTROL
TRANSMITTING EQUIPMENT
RC-65**

**TARGET CONTROL
TRANSMITTING EQUIPMENT
RC-65-Z**

Radio Modulator and Transmitter BC-925.....Radio Modulator and Transmitter BC-925-Z
Radio Control Box BC-494.....Radio Control Box BC-494-Z
Dynamotor Unit PE-180.....Dynamotor Unit PE-180-Z

To facilitate use of the book, only Target Control Transmitting Equipment RC-65 and its components are referred to in the text and shown in illustrations, except where differences in the equipment require mention of Target Control Transmitting Equipment RC-65-Z.

SECTION I GENERAL DESCRIPTION

1. GENERAL.

a. This handbook describes the installation, adjustment, operation, and limited repair of Target Control Transmitting Equipment RC-65.

b. Purpose of the equipment (see fig. 1) is to control large airborne targets. The useful control range varies with the type of installation and the type of receiving equipment used.

c. The equipment is used with Radio Receiver and Selector BC-617-T1 or BC-617-T2 and will be used with Radio Receiver and Selector BC-617-Z.

2. PRINCIPAL COMPONENTS.

a. EQUIPMENT SUPPLIED.—Principal components supplied with Target Control Transmitting Equipment RC-65 are listed in the following table.

<i>Quantity</i>	<i>Name of Unit</i>	<i>Overall Dimensions (inches)</i>	<i>Weight (lbs.)</i>
1	Radio Modulator and Transmitter BC-925 (Radio Modulator and Transmitter BC-925-Z is used with Target Control Transmitting Equipment RC-65-Z)	21 x 9 x 16	35
1	Mounting FT-442-A	2 x 6 x 18	2.3
1	Mounting FT-462-A	2 x 6 x 18	2.3
1	Radio Control Box BC-494 (Radio Control Box BC-494-Z is used with Target Control Transmitting Equipment RC-65-Z)	3½ x 3½ x 4	.9
1	Control Box BC-756	5½ x 6¾ x 8½	8.0
1	Antenna AN-117-A	72	
1	Cord CD-861	*	*
1	Cord CD-862-A	See figure 7	1.25
1	Cord CD-866 or Cord CD-866-B	See figure 7	2.0
1	Cord CD-918-A or Cord CD-918	See figure 7	3.0
1	Cord CD-919 or Cord CD-919-A	See figure 7	1.25
		See figure 7	1.1
		See figure 7	1.0
		See figure 7	2.0

Quantity	Name of Unit	Overall Dimensions (inches)	Weight (lbs.)
1	Dynamotor Unit PE-180 (Dynamotor Unit PE-180-Z is used with Target Control Transmitting Equipment RC-65-Z)	6 x 9½ x 8	15
1	Mounting FT-443-A	6 x 11 x ½	.69
†	Plug AN-3106-20-1S		
†	Plug AN-3106-22-5P		
†	Receptacle AN-3100-20-1P		
†	Receptacle AN-3100-22-5S		
†	Adapter AN-3068-12		
†	Cap and Chain No. 9760-20, manufactured by American Phenolic Corp., Chicago, Illinois		
†	Cap and Chain No. 9760-22, manufactured by American Phenolic Corp., Chicago, Illinois		
†	Loop-Type Tube Clip AC-755-4		
†	Loop-Type Tube Clip AC-755-5		
†	Loop-Type Tube Clip AC-755-8		
†	Loop-Type Tube Clip AC-755-10		
†	Flexible Conduit	½ in dia.	*
†	90° Conduit Coupling AN-3062-12		
1	Coupling Nut AN-3054-12		
1	Ferrule No. 9775-12-8, manufactured by American Phenolic Corp., Chicago, Illinois		
‡	Test Unit I-201		
‡	Test Unit BC-914		
‡	Cord CD-866	See figure 7	
‡	Cord CD-866-B	See figure 7	

* Size and weight varies with individual installation requirements.

† Quantity varies with individual installation requirements.

‡ This unit is supplied with a group of equipments, and is used with, but is not part of, Target Control Transmitting Equipment RC-65 or RC-65-Z.

b. EQUIPMENT REQUIRED BUT NOT SUPPLIED.—The equipment required but not supplied with Target Control Transmitting Equipment RC-65 is listed in the following table.

Quantity	Name of Unit	Required Characteristics
1	Cord CD-307-A	135 inches long
1	Cord CD-307-A	84 inches long
1	Cord CD-316-A	60 inches long
1	Cord CD-316-A	200 inches long
1	Headset HS-23	
1	Insulator IN-79	
*	Wire W-106-A	

* Length of wire depends upon individual requirements of each installation.

3. POWER REQUIREMENTS.

Target Control Transmitting Equipment RC-65 requires 28 volts direct current and draws 12 amps current, whereas Target Control Transmitting Equipment RC-65-Z requires 12 volts direct current and draws 23.5 amps current.

SECTION II INSTALLATION AND ADJUSTMENT

1. INSTALLATION OF TARGET CONTROL TRANSMITTING EQUIPMENT RC-65.

a. MOUNTINGS FT-442-A AND FT-462-A.—Installation information is supplied in figure 2. Since Radio Modulator and Transmitter BC-925 is mounted on these units, choose a location which will place them in a normally horizontal plane, and which will allow clear space in front of the transmitter unit so it may be removed from its case. Place the radio modulator and transmitter on these mountings and lock the case to the mounts by means of the wing-type fasteners.

b. DYNAMOTOR UNIT PE-180.—Choose a location for the dynamotor so the armature shaft will be in a horizontal plane, and Cord CD-919 will reach from it to the transmitter unit. Using figure 3 as a guide, install Mounting FT-443-A. Place the dynamotor unit on the mounting and secure it by means of the snapslide fasteners. Safety-wire the fasteners.

c. RADIO CONTROL BOX BC-494.—Install Radio Control Box BC-494, using figure 4 as a guide. Make sure Cord CD-918 is of sufficient length to connect the control box to Dynamotor Unit PE-180. Place the "BATTERY" switch on the radio control box in the "OFF" position.

d. CONTROL BOX BC-756.—Install Control Box BC-756, using figure 5 as a guide. Make sure Cord CD-866 or CD-866-B will reach from the control box to Radio Modulator and Transmitter BC-925. Place the "OPERATE" switch (located on Control Box BC-756) in the "OFF" position.

e. ANTENNA AN-117-A.—Install Antenna AN-117-A and Insulator IN-79. Make sure Cord CD-861 will reach from the antenna to the transmitter unit. (See fig. 6.)

f. RADIO MODULATOR AND TRANSMITTER BC-925.

(1) Release the two snap fasteners at the rear of the case of Radio Modulator and Transmitter BC-925 by giving them a quarter turn counterclockwise with a screwdriver. Remove the chassis from the case by grasping the handles and pulling forward.

CAUTION

Be careful to hold the rear of the chassis to prevent it from dropping when it clears the case.

(2) Check to see that:

(a) The crystal and tubes are secure in their sockets.

(b) The master modulation control, located on top of the chassis, is set to the yellow dot (5 kc) position.

(3) Replace the chassis of the radio modulator and transmitter in its case and fasten it by turning the fasteners at the rear of the case a quarter-turn clockwise.

g. CORD CONNECTIONS.

(See fig. 7.)

Note

Cords and cables should be anchored so they will be kept free from grease and oil.

(1) Connect Cord CD-861 from Antenna AN-117-A to the socket marked "ANT CD-861" on Radio Modulator and Transmitter BC-925.

(2) Connect Cord CD-862-A to the primary power source and to the socket marked "BATTERY" on Dynamotor Unit PE-180.

(3) Connect one end of Cord CD-866 or CD-866-B to the socket marked "CONTROL BOX CD-866" on Radio Modulator and Transmitter BC-925 and connect the other end to the socket on Control Box BC-756.

(4) Connect one end of Cord CD-919 to the socket marked "MOD. TRANS" on the dynamotor unit; connect the other end to the socket marked "DYNAMOTOR UNIT CD-919" on Radio Modulator and Transmitter BC-925.

(5) Connect one end of Cord CD-918 to the socket marked "CONTROL BOX" on Dynamotor Unit PE-180; connect the other end to the socket on Radio Control Box BC-494.

b. 12- OR 24-VOLT OPERATION.—Safety-wire the switch on Control Box BC-756 in the 24-volt position for Target Control Transmitting Equipment RC-65, or in the 12-volt position for Target Control Transmitting Equipment RC-65-Z.

2. ADJUSTMENT.

WARNING

Operation of this equipment involves the use of high voltages which are dangerous to life. Personnel must observe all safety regulations at all times.

a. PROCEDURE.—When operating the equipment for the first time, or after maintenance work, or when it is doubtful whether the equipment is properly tuned to the antenna, proceed as follows:

(1) Connect the cord from Test Unit I-201 to the socket marked "TEST UNIT I-201" on Radio Modulator and Transmitter BC-925. (Remove cap first.)

(2) Place the "BATTERY" switch on Radio Control Box BC-494 in the "ON" position.

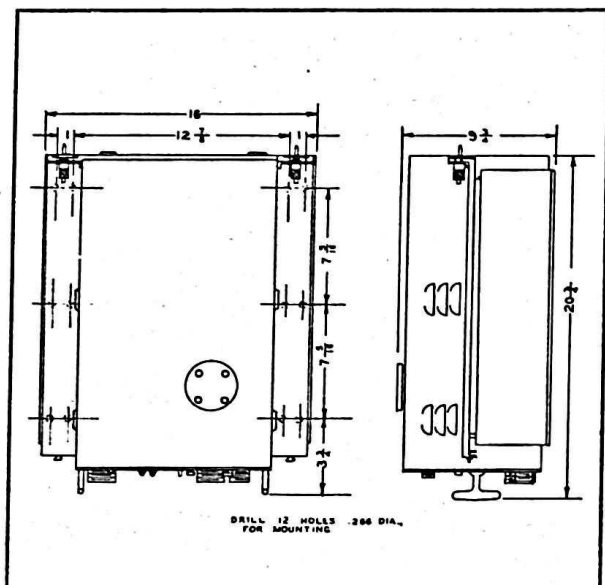


Figure 2—Radio Modulator and Transmitter BC-925, Mounting Dimensions

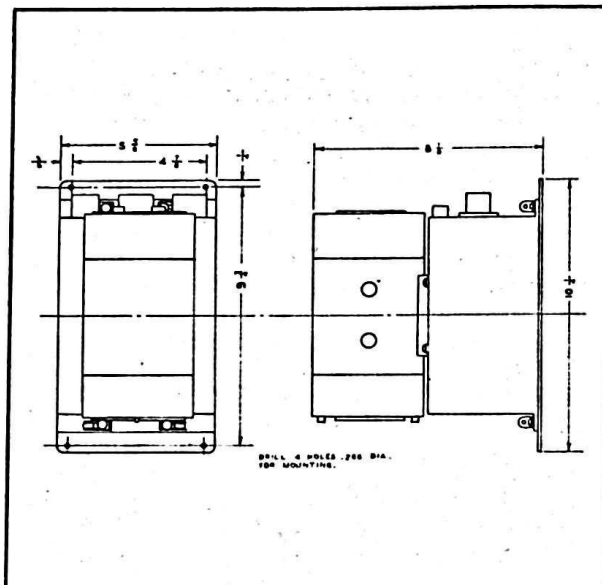


Figure 3—Dynamotor Unit PE-180 with Mounting FT-443-A, Mounting Dimensions

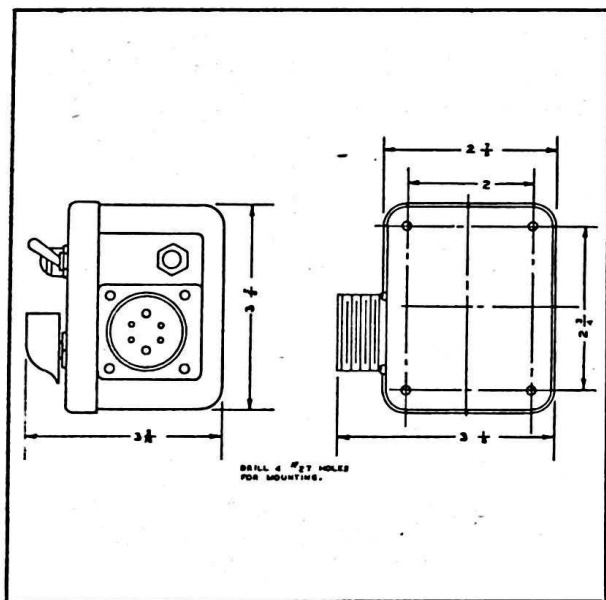


Figure 4—Radio Control Box BC-494, Mounting Dimensions


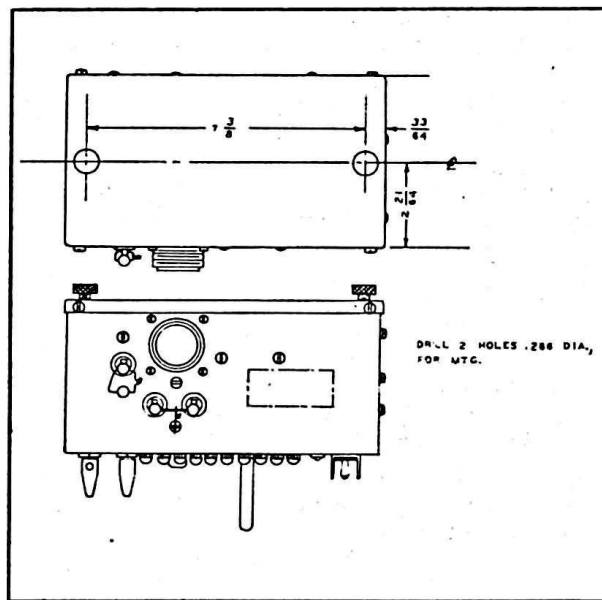


Figure 5—Control Box BC-756, Mounting Dimensions

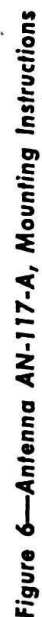

(3) After 30 seconds place the "OPERATE" switch on Control Box BC-756 in the "ON" position.

(4) With a screwdriver, tune the "FINAL" adjustment, located on the front of the radio modulator and transmitter, to minimum reading on the O-150 milliammeter on Test Unit I-201. Slightly adjust the "TUNE ANT" control, also located on the front of the radio modulator and transmitter, and retune "FINAL." Note the new plate current reading. Having noted an increase or decrease in minimum plate current, proceed to readjust so that the minimum plate current is adjusted to 95 milliamperes, or slightly less, with a pronounced upswing each side of resonance as the "FINAL" is tuned.

Note

O plate current reading indicates no excitation; check primary power source polarity. If this is correct, refer to the handbook of maintenance instructions for this equipment.

(5) Note the reading on the O-5 milliammeter with the "METER SWITCH" on the radio modulator and transmitter in "FINAL GR." position. If this reading is less than 1 milliamperes, the equipment is improperly aligned in its preliminary stages. For corrective measures see the handbook of maintenance instructions for this equipment.

(6) Turn the "OPERATE" switch on Control Box BC-756 to "OFF."

(7) Turn the "BATTERY" switch on Radio Control Box BC-494 to "OFF."

b. LOW TEMPERATURE ADJUSTMENTS.—

When the equipment has been subjected to extremely low temperatures immediately preceding operation, place the "OPERATE" switch on Control Box BC-756 in the "OFF" position and place the "BATTERY" switch on Radio Control Box BC-494 in the "ON" position. Allow the equipment to heat up for approximately 15 minutes. This will allow the audio oscillators to operate closer to their nominal frequencies.

SECTION III OPERATION

1. OPERATION PROCEDURE.

This equipment operates very simply. After the steps outlined in section II, paragraph 2, have been accomplished, the following procedures should be used to operate the equipment.

Note

When the "CARRIER CONTROLLED" position is used, the equipment is transmitting only when modulated by some audio tone. This is used when it is not desired to have carrier signal on the air at all times.

When the "CARRIER CONTINUOUS" position is used, the transmitter carrier signal is on at all times.

a. "CARRIER CONTINUOUS."

(1) TO START.

(a) Turn the "BATTERY" switch on Radio Control Box BC-494 to "ON."

(b) After about 30 seconds turn the "OPERATE" switch on Control Box BC-756 to "ON."

(c) Proceed to operate the control stick and stepping controls on Control Box BC-756 as stated in paragraph 2 below.

(2) TO STOP.—Turn the "BATTERY" and "OPERATE" switches to "OFF."

b. "CONTROLLED CARRIER."—To operate the equipment as a controlled carrier transmitting equipment, remove the safety wire from the "CARRIER

CONTINUOUS-CARRIER CONTROLLED" switch on the front panel of Radio Modulator and Transmitter BC-925, and place the switch in the "CARRIER CONTROLLED" position. Proceed as outlined in the paragraph immediately above.

2. FUNCTIONS OF SWITCHES ON CONTROL BOX BC-756.


The control of the airplane is accomplished mainly by the operation of three main switches on Control Box BC-756. The selection of the auxiliary function is made by the "STEP-RESET" switch. The airplane is operated by coordination of the control stick ("RIGHT-LEFT" and "UP-DOWN" switches) and the "INCREASE-DECREASE" switch.

a. The "STEP-RESET" switch makes possible the control of auxiliary functions of the airplane such as throttle, brakes, propeller pitch, flaps, and gear. To select the function desired push the "RESET" switch once and the No. 1 or "AUTO" lamp will light. Push the "STEP" switch up once and the No. 2 or "TURN" lamp will light. To select any function, push the "STEP" switch up until the light for the desired function comes on. In order to return to "AUTO" function after having pushed the "STEP" switch up two or more times, press the "RESET" switch down. This returns operation to "AUTO" function. The auxiliary function chosen by the "STEP-RESET" switch is indicated by the indicator lamps.

b. The control stick controls the altitude of the airplane. The "RIGHT-LEFT" positions provide con-

CONTROL AIRPLANE TYPE													
ITEM NO.	QTY.	DESCRIPTION	L-1	L-1A	AT-7	C-7B	DWE. OR SPEC. NO.	WEIGHT LBS.	LARGEST DIMENSIONS			EQUIPMENT PART OF -	
			TYPE & LENGTH	TYPE & LENGTH	TYPE & LENGTH	TYPE & LENGTH			TYPE & LENGTH	WIDTH	LENGTH		HEIGHT
(A)	1	CORD	CD-861 48"	CD-861 48"	CD-861 156"	CD-861 116"	SC-65 5017	0.5	—	—	—	RC-65	
(B)	1	CORD	CD-862 48"	CD-862 48"	CD-862 48"	CD-862 72"	SC-65 5018	0.4	—	—	—	RC-65	
(C)	1	CORD	CD-918-A 34"	CD-918-A 34"	CD-918-A 52"	CD-918 23"	SC-65 5019	0.2	—	—	—	RC-65	
(D)	1	CORD	CD-918 60"	CD-918 60"	CD-918 34"	CD-918 96"	SC-65 5020	0.2	—	—	—	RC-65	
(E)	1	CORD	CD-868-B 93"	CD-868-B 93"	CD-868-B 114"	CD-868-B 145"	SC-65 5021	0.4	—	—	—	RC-65	
(F)	1	CORD	CD-307A 48"	CD-307A 48"	CD-307A 72"	CD-307A 48"	SC-65 5022	0	5	—	—	RC-65	
(G)	1	CORD	CD-316A 36"	CD-316A 36"	CD-316A 52"	CD-316A 146"	SC-65 5023	0	7	—	—	RC-65	
(1)	1	ARMED MODULATOR TRANSMITTING UNIT	BC-925-Z	BC-925	BC-925	BC-925	SPEC. 271-1751	40	0	22"	18 1/2"	10"	RC-65
(2)	1	ANTENNA WHIP	FT-442-A	FT-442-A	FT-442-A	FT-442-A	SPEC. 271-1753	—	—	—	—	—	RC-65
(3)	1	DYNAMOTOR UNIT	PE-180-Z	PE-180	PE-180	PE-180	SPEC. 271-1752	15	0	10"	6"	8"	RC-65
(4)	1	DYNAMOTOR WINDING BARREL	FT-443-A	FT-443-A	FT-443-A	FT-443-A	SPEC. 271-1754	—	—	—	—	—	RC-65
(5)	1	RADIO CONTROL BOX	BC-494-Z	BC-494	BC-494	BC-494	SPEC. 271-1755	0	12	4"	4"	3"	RC-65
(6)	1	RADIO CONTROL BOX	BC-756	BC-756	BC-756	BC-756	SPEC. 271-1756	5	4	8"	5"	4"	RC-65
(7)	1	HEADSET	HS-23 OR HS-33	HS-23 OR HS-33	HS-23 OR HS-33	HS-23 OR HS-33	SPEC. 271-1757	0	10	—	—	—	RC-65
(8)	10	FUSE	FU-46	FU-46	FU-46	FU-46	MANUFACT. DETAIL	0	2	—	—	—	RC-65
(9)	1	WIRE	W-106A 5'	W-106A 5'	W-106A 5'	W-106A 5'	SPEC. 271-1758	0	1	—	—	—	RC-65
(10)	1	ANTENNA WHIP	AN-117-A	AN-117-A	AN-117-A	AN-117-A	SPEC. 271-1759	1	0	—	72"	—	RC-65
(11)	1	LOOP TYPE TUBE CLIP	AC-755-4	AC-755-4	AC-755-4	AC-755-4	SPEC. 271-1760	0	1/2	—	—	—	RC-65
(12)	1	LOOP TYPE TUBE CLIP	AC-755-5	AC-755-5	AC-755-5	AC-755-5	SPEC. 271-1761	0	1/2	—	—	—	RC-65
(13)	3	LOOP TYPE TUBE CLIP	AC-755-8	AC-755-8	AC-755-8	AC-755-8	SPEC. 271-1762	0	1/2	—	—	—	RC-65
(14)	12	LOOP TYPE TUBE CLIP	AC-755-10	AC-755-10	AC-755-10	AC-755-10	SPEC. 271-1763	0	1	—	—	—	RC-65
(15)	1	INSULATOR	IN-79	IN-79	IN-79	IN-79	SPEC. 271-1764	0	1/2	—	—	—	RC-65
(16)	1	WASHER, LOCK	FOR 1/8" ROD	FOR 1/8" ROD	FOR 1/8" ROD	FOR 1/8" ROD	—	—	—	—	—	—	*
(17)	1	NUT	1/8"-24	1/8"-24	1/8"-24	1/8"-24	—	—	—	—	—	—	*
(18)	1	BATTERY JUNCTION BOX	—	—	—	—	—	—	—	—	—	—	*

* — DESIGNATES EQUIPMENT NOT FURNISHED BY SIGNAL CORPS BUT TO BE FURNISHED BY THE ARMY AIR FORCE OR AIRPLANE MANUFACTURER

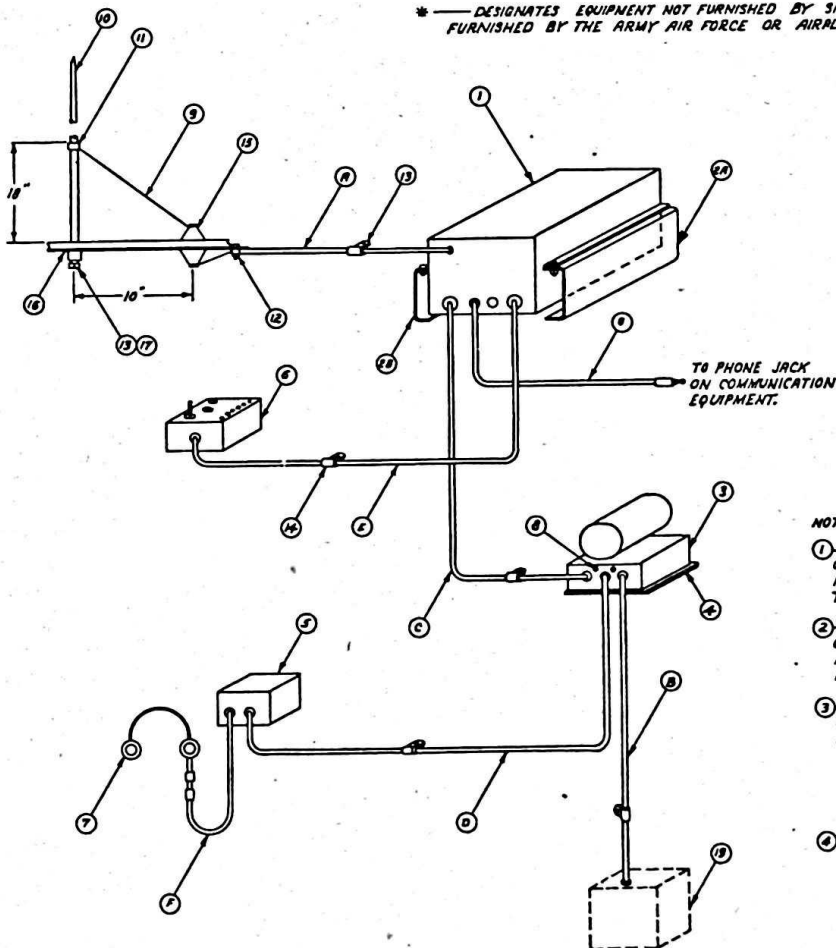

NOTES:—

- (1) FOR INSTALLATION OF TARGET CONTROL TRANSMITTING EQUIPMENT RC-65 AND RC-65-Z IN CONTROL TRUCKS, SEE DWG. SC-F-6101
- (2) FOR INSTALLATION OF TARGET CONTROL RECEIVING EQUIPMENT RC-64 AND RC-64-Z. SEE SIGNAL CORPS DWG. SC-F-6034, OR RC DWG. S-44G3460.
- (3) FOR TESTING RC-65 OR RC-65-Z EQUIPMENTS AFTER INSTALLATION, USE TEST EQUIPMENT IE-72, U.S. ARMY SPEC. 271-1755. THIS EQUIPMENT IS NORMALLY FURNISHED IN THE RATIO OF ONE TEST EQUIPMENT FOR EVERY TWO RC-65 EQUIPMENTS.
- (4) FOR OPEN-WIRING CABLE INSTALLATIONS SEE DWG. S-44D3461.

Figure 7—Target Control Transmitting Equipment RC-65, Cording Diagram

trol of the rudder except when the auxiliary function "TURN" is operated, in which case the stick controls only the ailerons. This arrangement permits greater banking on the turns.

c. The "INCREASE-DECREASE" switch controls the auxiliary function chosen by the "STEP-RESET" switch. In the "AUTO" and "TURN" positions it controls the throttle. In the "BRAKE" position it con-

trols brake and so on for the additional auxiliary functions.

d. The "HOLD DOWN TO STEP BEYOND ARROW" switch is used as a safety measure. The "STEP-RESET" switch cannot be operated beyond the "BRAKE" position without this switch being held down.

SECTION IV EMERGENCY OPERATION AND REPAIR

1. EMERGENCY OPERATION.

This equipment is so designed that improper sequence of operating procedure will not result in improper functioning of the equipment, providing all steps are completed. In case of emergency, should the

system fail to operate in the "CARRIER CONTROLLED" position of the "CARRIER CONTINUOUS-CARRIER CONTROLLED" switch, it may be possible to resume operation by throwing the switch to the "CARRIER CONTINUOUS" position.